Publication No. MA 3066-2
2/98

MODIFICATION INSTRUCTIONS

for the

KODAK MULTILOADER 700/700 PLUS SIDE-BY-SIDE KIT

Service Code 3066

MODIFICATION No. 2

Type 1R REQUIRED

PURPOSE:

This modification protects the PCB A4 against ESD which can be fed from the Dark Room Feed Tray via the cable to the PCB A4.

IMPORTANT : Use qualified service personnel to install this modification !

SERIAL NUMBERS : 0101..0171

: 1101..1192

: 2001..2106

: 5001..5111

INSTALLATION TIME : Approx. 0.5 hours

SPECIAL TOOLS : none

PARTS AVAILABILITY : 2/98

PARTS REQUIREMENTS : MOD KIT PN 9261806

Please note

The information contained herein is based on the experience and knowledge relating to the subject matter gained by Kodak prior to publication.

No patent license is granted by this information.

KODAK reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from the use of this information, even if loss or damage is caused by Kodak's negligence or other fault.

PARTS LIST

PART NUMBER	DESCRIPTION	QUANTITY
9261806	MODIFICATION KIT No. 2 consists of	
MA3066-2	MODIFICATION INSTRUCTIONS	1
9261801	HARNESS ADAPTER EMI	1

INTRODUCTION

There have been cases where Electrical Static Discharges (ESD) from the Dark Room Feed Tray have passed via the cable to the PCB A4 causing premature failure of the PCB. To further protect the PCB A4 it has been found necessary to install a Zener Diode and an EMI Filter.

INSTALLATION of MOD 2

1. Switch off the SBS and all connected devices.

2 Remove cover of the SBS.

3. Open the cable duct near the PCB A4.

4. Disconnect connector A4X28 at the PCB A4 and connect it to the cable delivered with Modification Kit

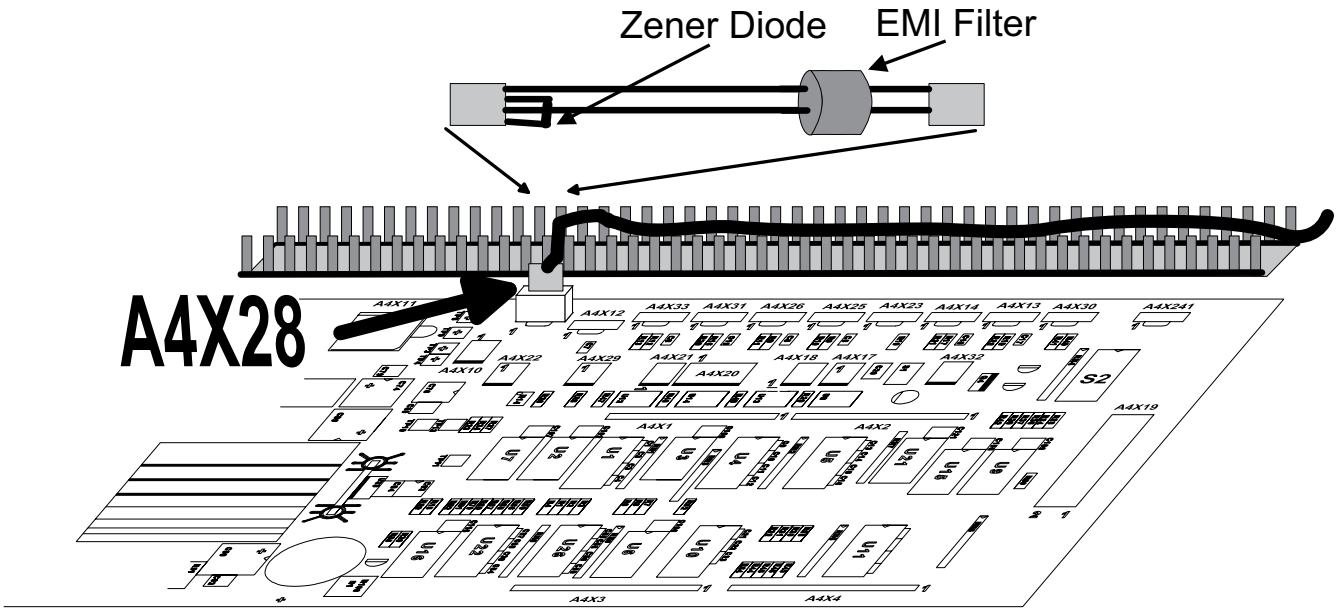

figure 1-1

5. Store the cable in the cable duct.

6. Close the cable duct.

7. Circle Mod 2 at the modification label.

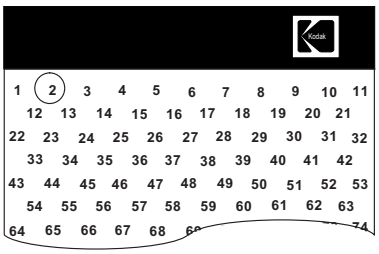

8. Close cover.

CUSTOMER EQUIPMENT SERVICES KODAK AG STUTTGART